

Safety

+

Machine


Safety

Intrinsically Safe Explosion-proof

Explosion **EB3N Safety Relay Barrier** Protection

First ever in the world! Safety relay barrier rated by Japan TIIS ([Exia] II C) and Machine Safety Standard ISO 13849-1 (PLe, Cat 4)

Ensures machine safety in an explosive atmosphere

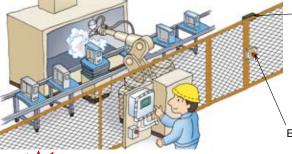

Interlock Switch

In an explosive atmosphere, safety input devices can be connected to the EB3N to build a safety system.

	Explosion Protection Safety	Machine Safety
EB3N Safety Relay Barrier	Yes	Yes
Conventional Contact Signal Transducer	Yes	_

Emergency Stop Switch

EB3N ensures explosion protection safety and machine safety



By combining the EB3N safety relay barrier with safety input devices, such as emergency stop switches or interlock switches, and contactors compliant with safety standards, explosion protection safety and machine safety can be achieved. In addition, safety control devices, such as safety relay modules or safety controllers, can also be combined to build a safety system.

Conventional system does not ensure machine safety

Hazardous Area		Non-hazardous Area					
Emergency stop switch, Interlock switch	Contact si transduce EB3C relay b	r	Safety relay module, Safety controller	•	Safety contactor	→	Motor, etc.
	Safety Input De	vice Conta	ct Signal Transducer (EB3C)	Safe	ety Control Device	Safety	/ Standards
Explosion Protection Safety	Yes	Yes Yes			_		Yes
Machine Safety	Yes	Yes –		Yes –		_	
Combining a conventional contact signal transducer with safety input devices, such as emergency stop switches or interlock switches, and safety control devices such as safety relay modules, safety controllers, or safety PLCs will also meet explosion protection safety. but does not meet machine safety.							


IDEC CORPORATION

Build a safety system in an explosive atomosphre

	Explosion Protection	Safety relay barrier	[Exia] II C	Safety	Performance level e		
		Switch (EB9Z-A)	Exia II CT6	Performance			
	TOLECTION	Switch (EB9Z-A1)	Exia II BT6		3 <i>7</i>		
	_						

· Ensures explosion protection safety and machine safety in an explosive atmosphere.

- Machine safety system can be built in compliance with
- ISO13849-1 Category 4, Performance level e. · Safety input devices applicable in any explosive gas and hazardous areas are available.
- · Available with auxiliary inputs (5 points) used to monitor the operating status of safety input devices.
- A wide variety of Japan TIIS-rated emergency stop switches and interlock switches are available.
- Global usage
- Explosion protection: Japan (TIIS), USA (FM pending), Europe (ATEX pending), China (CQST pending) Machine safety: **TÜV Rheinland**
- No grounding required

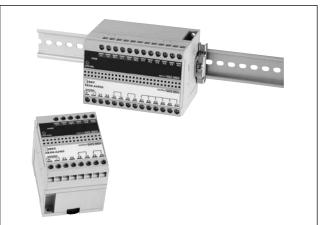

Package quantity: 1

Types					Package quantity: 1
Safety Input Points	Safety Output Points	Auxiliary Input Points (Note 1)	Auxiliary Output Points (Relay Output)	Reset (Start) (Note 2, Note 3)	Ordering Type No.
0	2NO	Without	Without	Auto reset (Auto start)	EB3N-A2ND
2	2NO		without	Manual reset (Manual start)	EB3N-M2ND
0	2NO	E (1 common)	ENO (1 common)	Auto reset (Auto start)	EB3N-A2R5D
2	200	5 (1 common)	5NO (1 common)	Manual reset (Manual start)	EB3N-M2R5D

Note 1: A maximum of five monitor contacts from safety input devices can be connected to the auxiliary input terminals. In addition, non-safety input devices can also be connected to the auxiliary input terminals.

Note 2: On auto reset (auto start) models, when the safety condition is met (two safety inputs are both on), safety outputs are turned on automatically. Connect the reset (start) input terminals Y1 and Y2 together except for the following cases:

When connecting a contactor or force guided relay to the safety output of the EB3N, connect the NC contacts of the contactor or force guided relay to the reset (start) input terminals Y1 and Y2 of the EB3N for use as a backcheck input signal.

Note 3: On manual reset (manual start) models, while the safety condition is met (two safety inputs are both on), safety outputs are turned on at the falling edge of the reset switch (start switch) signal (OFF→ON→OFF) (start off check). Manual reset (manual start) models have a monitoring function of reset switch contacts (detection of welded contacts). Use NO contacts of a momen-

tary switch for the reset (start) input. When connecting a contactor or force guided relay to the safety output of the EB3N, connect the NC contacts of the contactor or force guided relay to

the reset (start) input terminals Y1 and Y2 of the EB3N for use as a backcheck input signal.

Selection Guide

1. Selecting the reset (start) functio	n
Auto reset (auto start):	Select this model when connecting

safety control devices, such as safety relay modules or safety controllers, to the EB3N safety outputs to set up a safety system, using the reset (start) function of the safety control device. Select this model when connecting contactors or force guided relays to the EB3N safety outputs to set up a safety system, and a risk assessment on the entire system has not found any safety problem in using auto reset (auto start) Manual reset (manual start): Select this model when connecting contactors or force guided relays to the EB3N safety outputs to set up a safety system, and a risk assessment on the entire system has found that manual reset (manual start) is necessary.

2. Selecting the auxiliary outputs Without auxiliary outputs: With auxiliary outputs:

Select this model when the operating status of safety input devices are not monitored. Select this model when the operating status of safety input devices are monitored or when non-safety input devices are also connected ..

General Specifications

Rated Power Voltage		24V DC		
Power Voltage	Range		20.4 to 26.4V DC	
Operating Tem	perature		-20 to +60°C (no freezing)	
Operating Hum	nidity		45 to 85% RH (no condensation)	
Power	Without auxiliar	y output	5.5W maximum	
Consumption	With auxiliary or	utput	7.0W maximum	
	Contacts	13-14, 23-24	2NO	
Safety Output	Rated Load	Resistive	30V DC, 1A	
		Inductive	DC-13, 24V, 1A	
	Response (rated voltage)	Turn on	100 ms maximum	
		Turn off	20 ms maximum	
	Contacts	A* - C1	5NO/1 common	
Auxiliary	Rated Load	Resistive	24V DC, 3A, common terminal 5A max.	
Output	Response	Turn on	15 ms maximum	
	(rated voltage)	Turn off	10 ms maximum	
Mounting		DIN rail or panel mounting		

*: Channel Nos. 1 to 5

Explosion-Protection Specifications

-			
Explosion Protection	[Exia] II C		
Non-intrinsically Safe Circ	250V		
Intrinsically Safe Circuit M	aximum Voltage (Uo)	13.2V	
Intrinsically Safe Circuit M	227.2 mA		
Intrinsically Safe Circuit M	750 mW		
Intrinsically Safe Circuit Al	0.28 μF		
Intrinsically Safe Circuit Al	0.56 mH		
Intrinsically Safe Circuit Safety circuit		(Note 1)	
Wiring Resistance (Rw)	(Note 2)		
Note 1: 10 Ω maximum (500m maximum using a 1.25 mm ² cable)			

Note 2: $600/(N+1)\Omega$ maximum, where N = the number of common channels

Safety Specifications

Category	4
Performance Level (PL)	e
Mean Time to Dangerous Failure (MTTFd)	100 years
Diagnostic Range	99% minimum

Calculation conditions for MTTFd

t_{cycle}: Mean operation cycle = 1 hour h_{op} : Mean operation hours per day = 24 hours

Note: When tcycle is shorter than 1 hour, MTTFd will decrease.



Mean operation days per year = 365 days

EB3N Safety Relay Barrier

24V DC

Y1-Y2

11-12

21-22

N1, N2

P*-N3

13-14

23-24

A*-C1

*: 1 to 5

Terminal Functions

Power

Reset input

(Start input)

Safety input 1

Safety input 2

Signal ground

Auxiliary input

Safety output 1

Safety output 2


Auxiliary output

Dimensions


EB3N-A2ND EB3N-M2ND



Mounting Hole Layout
EB3N-A2ND
EB3N-M2ND



EB3N-A2R5D EB3N-M2R5D




EB3N-A2R5D EB3N-M2R5D




All dimensions in mm.

EB3N System Configuration Examples


• 1:1 connection with a safety input device, compliant with Category 4

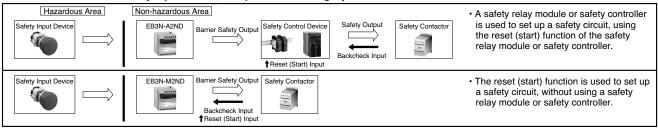

• Connection with multiple safety input devices, capable of monitoring up to 5 contact operations, compliant with Category 3 For monitoring operating statuses of safety input devices located in a non-hazardous area

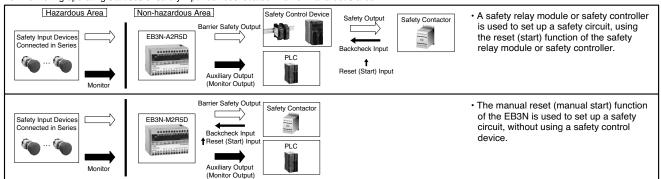

• Installing a reset switch in a hazardous area, using auxiliary input and output

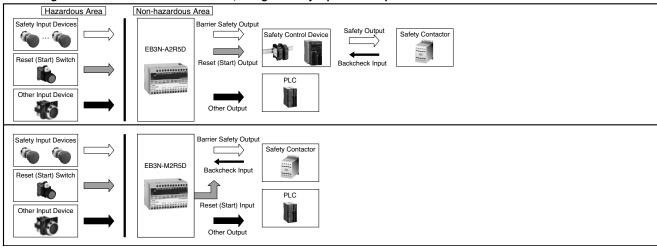



Safety Input Devices Connectable to Safety Input Terminals (Examples)

Emergency stop switch: Safety switch:

(Non-illuminated) XW1E-BV402MFRH, XN4E-BL412MRH HS6B-02B05, HS1B-02R

Instructions

Notes for Operation

- 1. Do not disassemble, repair, or modify the EB3N safety relay barrier, otherwise the safety characteristics may be impaired.
- 2. Use the EB3N within its specification values. 3
- The EB3N can be mounted in any direction.
- 4. Mount the EB3N on a 35-mm-wide DIN rail or directly on a panel surface using screws. When mounting on a DIN rail, push in the clamp and use end clips to secure the EB3N. When mounting on a panel surface, tighten the screws firmly.
- Excessive noise may cause malfunction or damage to the 5 EB3N. When the internal voltage limiting circuit (thyristor) has shut down the power due to noise, remove the cause of the noise before powering up again.
- The internal power circuit contains an electronic fuse to sup-6. press overcurrents. When the electronic fuse has tripped, shut down the power, remove the cause of the overcurrent before powering up again.
- 7 Use crimping terminals with insulation sheath for wiring. Tighten the terminal screws, including unused terminal screws, to a recommended tightening torque of 0.6 to N·m using a screwdriver of ø5.5 mm in diameter.
- 8. Before inspecting or replacing the EB3N, turn off the power.

Notes for Machine Safety

- 1. Operate the safety input device to check the EB3N functionality everyday.
- 2 For safety input devices, such as safety switches or emergency stop switches, connected to the EB3N, use safety standardcompliant devices with direct opening action and 2NC contacts.
- 3. Do not use the auxiliary input as a safety input.
- 4. For safety control devices connected with the EB3N, use machine safety standard-compliant devices with a disparity detection function.
- 5. Use safety inputs and safety outputs in a circuit configuration compliant with safety requirements.
- 6. To calculate the safety distance, take into consideration the response time of all devices comprising the system, such as the EB3N and safety devices connected to the EB3N.
- 7. Separate the input and output wiring from power lines and motor lines.
- 8. When using multiple EB3N safety relay barriers, do not connect one switch to more than one EB3N. Use separate switches for each EB3N
- To ensure EMC, use shielded cables for safety inputs and aux-9 iliary inputs. Connect the shield to the FG of the control panel on which the EB3N is mounted.
- 10. For protection against overcurrents, connect an IEC60127-2compliant 2A fast-blow fuse (5 × 20 mm).
- 11. Evaluate the ISO 13849-1 category and performance level in consideration of the entire system.

Notes for Explosion Protection Safety

- 1. Install the EB3N in an enclosure capable of protecting against mechanical shocks at a hazardous location in accordance with intrinsic safety ratings and parameters.
- Install and wire the EB3N so that the EB3N is not subject to 2. electromagnetic and electrostatic induction and does not contact with other circuits.

For example, keep a minimum spacing of 50 mm between intrinsically safe and non-intrinsically safe circuits, or provide a metallic separating board between the intrinsically safe circuit and non-intrinsically safe circuit. When providing a metallic separating board, make sure that the board fits closely to the enclosure (top, bottom, and both sides). Allowable clearance between the board and the enclosure is 1.5 mm at the maximum.

When a motor circuit or high-voltage circuit is installed nearby, keep a wider spacing than 50 mm between intrinsically safe and non-intrinsically safe circuits.

- 3. Keep a minimum spacing of 3 mm between the terminal or relay terminal block of the intrinsically safe circuit and the grounded metal parts of the metal enclosure.
- Connect the terminals so that IP20 is ensured.
- 5. To prevent disengaged wires from contacting with other intrinsically safe circuits, bind together the end of wires.
- 6 Make sure that the voltage of the power supply for the devices connected to the non-intrinsically safe circuit or the internal voltage of such devices does not exceed 250V AC/DC 50/60 Hz or 250V DC under any normal and abnormal conditions.
- 7. Make sure that the wiring of intrinsically safe circuits does not contact with other circuits or is not subject to electromagnetic and electrostatic inductions, otherwise explosion protection is not ensured
- 8. When identifying intrinsically safe circuits by color, use light blue terminal blocks and cables.
- When wiring the intrinsically safe circuit, determine the distance to satisfy the wiring parameters shown below.
 - a) Wiring capacitance $Cw \le Co Ci$
 - Co: Intrinsically safe circuit allowable capacitance Ci: Internal capacitance of switches
 - b) Wiring inductance Lw ≤ Lo Li
 - Lo: Intrinsically safe circuit allowable inductance
 - Li: Internal inductance of switches
 - c) Wiring resistance ≤ Rw
 - Rw: Allowable wiring resistance

• Switches in the Hazardous Area

- 1. A switch contains the switch contact, enclosure, and internal wiring. A switch contact refers to an ordinary switching device which consists of contacts only.
- 2. When the switch has internal wiring or lead wire, make sure that the values of internal capacitance (Ci) and inductance (Li) are within the certified values.
- Enclose the bare live part of the switch contact in an enclosure of IP20 or higher protection.
- Depending on the explosion-protection specifications of TIIS, 4 the exposed area of plastic switch operator, when installed in lanan is limited as follows

Japan, is innited as ionows.					
Certification	Explosion Protection	Exposed Area			
TC15758	Exia II CT6	20 cm ² maximum			
TC15961	Exia II BT6	100 cm ² maximum			

7-31, Nishi-Miyahara 1-Chome, Yodogawa-ku, Osaka 532-8550, Japan Tel: +81-6-6398-2571, Fax: +81-6-6392-9731

Specifications and other descriptions in this catalog are subject to change without notice

IDEC CORPORATION

IDEC CORPORATION (USA) Tel: +1-408-747-0550 / (800) 262-IDEC (4332) Fax: +1-408-744-9055 / (800) 635-6246 E-mail: opencontact@idec.com IDEC CANADA LIMITED Tel: +1-905-890-8561, Toll Free: (888) 317-4332 Fax: +1-905-890-8562 E-mail: sales@ca.idec.com IDEC AUSTRALIA PTY. LTD. Tel: +61-3-9763-3244, Toll Free: 1800-68-4332 Fax: +61-3-9763-3255 E-mail: sales@au.idec.com

IDEC ELECTRONICS LIMITED Tel: +44-1256-321000, Fax: +44-1256-32775 E-mail: sales@uk.idec.com IDEC ELEKTROTECHNIK GmbH Tel: +49-40-25 30 54 - 0, Fax: +49-40-25 30 54 E-mail: service@idec.de IDEC (SHANGHAI) CORPORATION 21-5353-1000. Fax: +86-21-5353-126 mail: idec@cn.idec.com IDEC (BEIJING) CORPORATION

E-mail: marketing@idec.co.jp

Tel: +86-10-6581-6131, Fax: +86-10-6581-5119 IDEC (SHENZHEN) CORPORATION Tel: +86-755-8356-2977, Fax: +86-755-8356-2944

IDEC IZUMI (H.K.) CO., LTD. Tel: +852-2803-8989, Fax: +852-2565-0171 E-mail: info@hk.idec.com IDEC TAIWAN CORPORATION Tel: +886-2-2698-3929, Fax: +886-2-2698-3931 E-mail: service@tw.idec.com Tel: +65-6746-1155, Fax: +65-6844-5995 E-mail: info@sg.idec.com

www.idec.com

IDEC